1 Assembly

- ☐ Install one shoulder bolt (B), one washer (D), and one nut (C) for each wheel (E) using the bolt holes provided in the wheel bracket. The shoulder bolt will install from the outside of the wheel through the hole in the wheel bracket. Tighten securely with the washer and nut positioned on the inside of the wheel bracket.

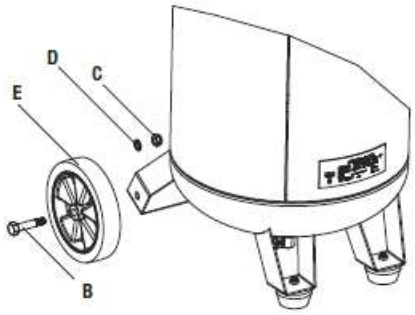

HUSKYTOOLS.com
Please contact 1-888-43-HUSKY for further assistance.